

FAQs

▶ How do I set a schedule type?

▶ How do I enable/disable early start?

▶ How do I display temperature in Fahrenheit or Celsius?

▶ How do I set a temperature offset?

▶ How do I turn on/off continuous backlight?

▶ How do I set an air filter reminder?

▶ How do I set auto-changeover?

▶ How do I lock/unlock the thermostat keypad?

▶ How do I adjust the heat cycle rate?

▶ How do I adjust the aux cycle rate?

▶ How do I adjust the cool cycle rate?

▶ How do I set compressor lockout?

▶ How do I set a max heat limit?

▶ How do I set a min cool limit?

▶ How do I reset my thermostat?

How do I set a schedule type? ▲

The thermostat has 3 different schedule types: 7-Day, 5-1-1 Day, and Non-Programmable.

To make change:

- While at home screen, press **Menu** button.
- Use ▲ and ▼ buttons to navigate to **Settings**. Press **Menu to Enter**.
- Use **Next** and **Back** to navigate to the screen that has "01" displayed in the top right corner.
- Use ▲ and ▼ buttons to between
- **7** - Allows separate program for each day
- **5** - Allows one program for the weekdays and separate program for the weekend days
- **0** - No Program
- Press **Exit** to save and exit when finished.

How do I enable/disable early start? ▲

By default, your thermostat starts heating or cooling at the scheduled time. It can start early so your programmed temperature is reached by the scheduled time.

To set early start:

- While at home screen, press **Menu** button.
- Use ▲ and ▼ buttons to navigate to **Settings**. Press **Menu to Enter**.
- Use **Next** and **Back** to navigate to the screen that has "02" displayed in the top right corner.
- Use ▲ and ▼ buttons to set early start to **ON** or **OFF**
- Press **Exit** to save and exit when finished.

How do I display temperature in Fahrenheit or Celsius? ▲

To make change:

- While at home screen, press **Menu** button.
- Use ▲ and ▼ buttons to navigate to **Settings**. Press **Menu to Enter**.
- Use **Next** and **Back** to navigate to the screen that has "03" displayed in the top right corner.
- Use ▲ and ▼ buttons to set early start to **F** or **C**
- Press **Exit** to save and exit when finished.

How do I set a temperature offset? ▲

Temperature offset enables your thermostat to read higher or lower than the actual temperature.

To make change:

- While at home screen, press **Menu** button.
- Use ▲ and ▼ buttons to navigate to **Settings**. Press **Menu to Enter**.
- Use **Next** and **Back** to navigate to the screen that has "04" displayed in the top right corner.
- Use ▲ and ▼ buttons to set early start to **-5** to **5** degrees
- Press **Exit** to save and exit when finished.

How do I turn on/off continuous backlight? ▲

Your thermostat needs a "C" wire to enable continuous backlight.

To make change:

- While at home screen, press **Menu** button.
- Use ▲ and ▼ buttons to navigate to **Settings**. Press **Menu to Enter**.
- Use **Next** and **Back** to navigate to the screen that has "05" displayed in the top right corner and "dL" in the center.
- Use ▲ and ▼ buttons to select
 - **ON** - continuous backlight
 - **OFF** - momentary backlight
- Press **Exit** to save and exit when finished.

How do I set an air filter reminder? ▲

You can set a reminder at a monthly interval. For example, 03 means to remind you every 3 months.

To make change:

- While at home screen, press **Menu** button.
- Use ▲ and ▼ buttons to navigate to **Settings**. Press **Menu to Enter**.
- Use **Next** and **Back** to navigate to the screen that has "06" displayed in the top right corner.
- Use ▲ and ▼ buttons to select between **1** to **12**, or set it to **OFF** to turn off reminder.
- Press **Exit** to save and exit when finished.

How do I set auto-changeover? ▲

Your thermostat can automatically switches between heat and cool.

To make change:

- While at home screen, press **Menu** button.
- Use ▲ and ▼ buttons to navigate to **Settings**. Press **Menu to Enter**.
- Use **Next** and **Back** to navigate to the screen that has "07" displayed in the top right corner.
- Use ▲ and ▼ buttons to set auto changeover **ON** or **OFF**.
- Press **Exit** to save and exit when finished.

How do I lock/unlock the thermostat keypad? ▲

You can lock keypad to prevent unwanted changes to the thermostat.

To make change:

- While at home screen, press **Menu** button.
- Use ▲ and ▼ buttons to navigate to **Settings**. Press **Menu to Enter**.
- Use **Next** and **Back** to navigate to the screen that has "07" displayed in the top right corner.
- Use ▲ and ▼ buttons to set lockout to **ON**.
- Press **Exit** to save and exit when finished.

To unlock keypad:

- While at home screen, press hold **Menu** and ▲ until 🔒 appears in top left corner.

How do I adjust the heat cycle rate? ▲

Heat cycle rate determines how often the heating system will turn on.

To make change:

- While at home screen, hold down the **Menu** button for eight (8) seconds to launch configuration menu. Don't release until your screen displays **05** in the top right corner.
- Use **Next** and **Back** to navigate to the screen that has "30" displayed in the top right corner and "CR" in the center.
- Use ▲ and ▼ buttons to select between **FAS**, **MED** and **SLO** (Fast, Medium, Slow).
- Press **Exit** to save and exit when finished.

How do I adjust the aux cycle rate? ▲

Aux cycle rate determines how often your auxiliary heat will turn on. It only applies if you have a heat pump.

To adjust aux cycle rate:

- While at home screen, hold down the **Menu** button for eight (8) seconds to launch configuration menu. Don't release until your screen displays **05** in the top right corner.
- Use **Next** and **Back** to navigate to the screen that has "32" displayed in the top right corner and "CR" in the center.
- Use ▲ and ▼ buttons to select between **FAS**, **MED** and **SLO** (Fast, Medium, Slow).
- Press **Exit** to save and exit when finished.

How do I adjust the cool cycle rate? ▲

Cool cycle rate determines how often your cooling system will turn on.

To adjust cool cycle rate:

- While at home screen, hold down the **Menu** button for eight (8) seconds to launch configuration menu. Don't release until your screen displays **05** in the top right corner.
- Use **Next** and **Back** to navigate to the screen that has "35" displayed in the top right corner and "CR" in the center.
- Use ▲ and ▼ buttons to select between **FAS**, **MED** and **SLO** (Fast, Medium, Slow).
- Press **Exit** to save and exit when finished.

How do I set compressor lockout? ▲

The lockout protects the compressor from short cycling.

To make change:

- While at home screen, hold down the **Menu** button for eight (8) seconds to launch configuration menu. Don't release until your screen displays **05** in the top right corner.
- Use **Next** and **Back** to navigate to the screen that has "50" displayed in the top right corner and "CR" in the center.
- Use ▲ and ▼ buttons to select
 - **ON** - enable 5 minute delay
 - **OFF** - no delay
- Press **Exit** to save and exit when finished.

How do I set a max heat limit? ▲

Max heat limit is the maximum set point for heat mode. It prevents your room from being overheated.

To make change::

- While at home screen, hold down the **Menu** button for eight (8) seconds to launch configuration menu. Don't release until your screen displays **05** in the top right corner.
- Use **Next** and **Back** to navigate to the screen that has "65" displayed in the top right corner and "CR" in the center.
- Use ▲ and ▼ buttons to select from **47** to **99**.
- Press **Exit** to save and exit when finished.

How do I set a min cool limit? ▲

Min cool limit is the minimum set point for cool mode. It prevents your room from being overcooled.

To make change::

- While at home screen, hold down the **Menu** button for eight (8) seconds to launch configuration menu. Don't release until your screen displays **05** in the top right corner.
- Use **Next** and **Back** to navigate to the screen that has "66" displayed in the top right corner and "CR" in the center.
- Use ▲ and ▼ buttons to select from **47** to **97**.
- Press **Exit** to save and exit when finished.

How do I reset my thermostat? ▲

To conveniently reset only the schedule and user settings back to factory defaults, press **Menu** and **Backlight** buttons at the same time and hold until the display goes blank and resets.

If the thermostat has good batteries, and shows a blank display or does not respond to key presses, the thermostat should be reset by **removing the batteries for 2 minutes**. This reset will not change the menu settings or program. If the condition persists after reinstalling the batteries, replace the thermostat.